

Installation Guide

Ethernet Connections

1. Connect the blue ethernet cable to **ETH 0** on the back of the LANsat server to the first ethernet port on the router.
2. Connect the green ethernet cable to **ETH 3** on the back of the LANsat server to the second ethernet port on the router.

LANsat Server Dimensions
660mm (w) x d.430mm (d) x 88mm (h)

Shipping Case Dimensions
845mm (w) x 600mm (d) x 200mm (h)

